


CF1000ATR-2/ CF800ATR-5 middle position light install guide

Date: 2024/06/13

Middle position light install-Front

Middle position light install-step1

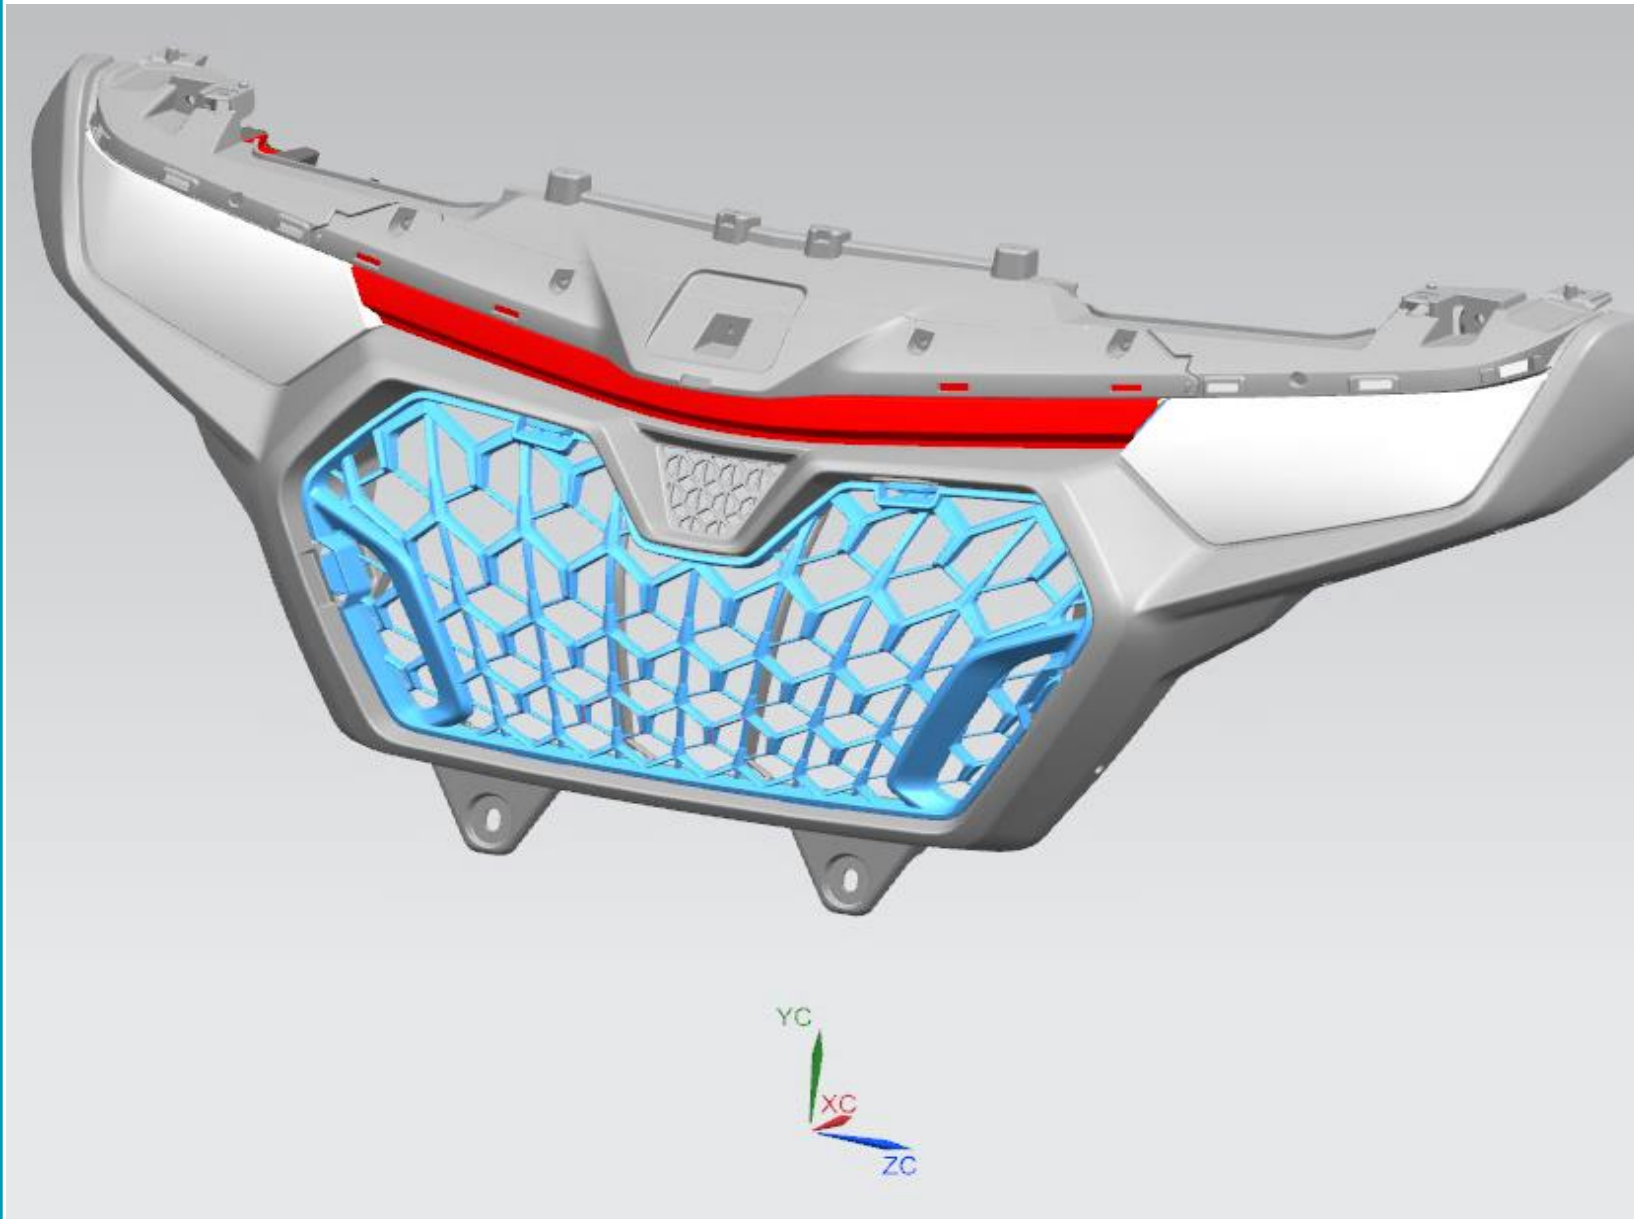


Remove the total part from vehicle like the picture

Middle position light install-step2




Remove these bolts from back side

Middle position light install-step3

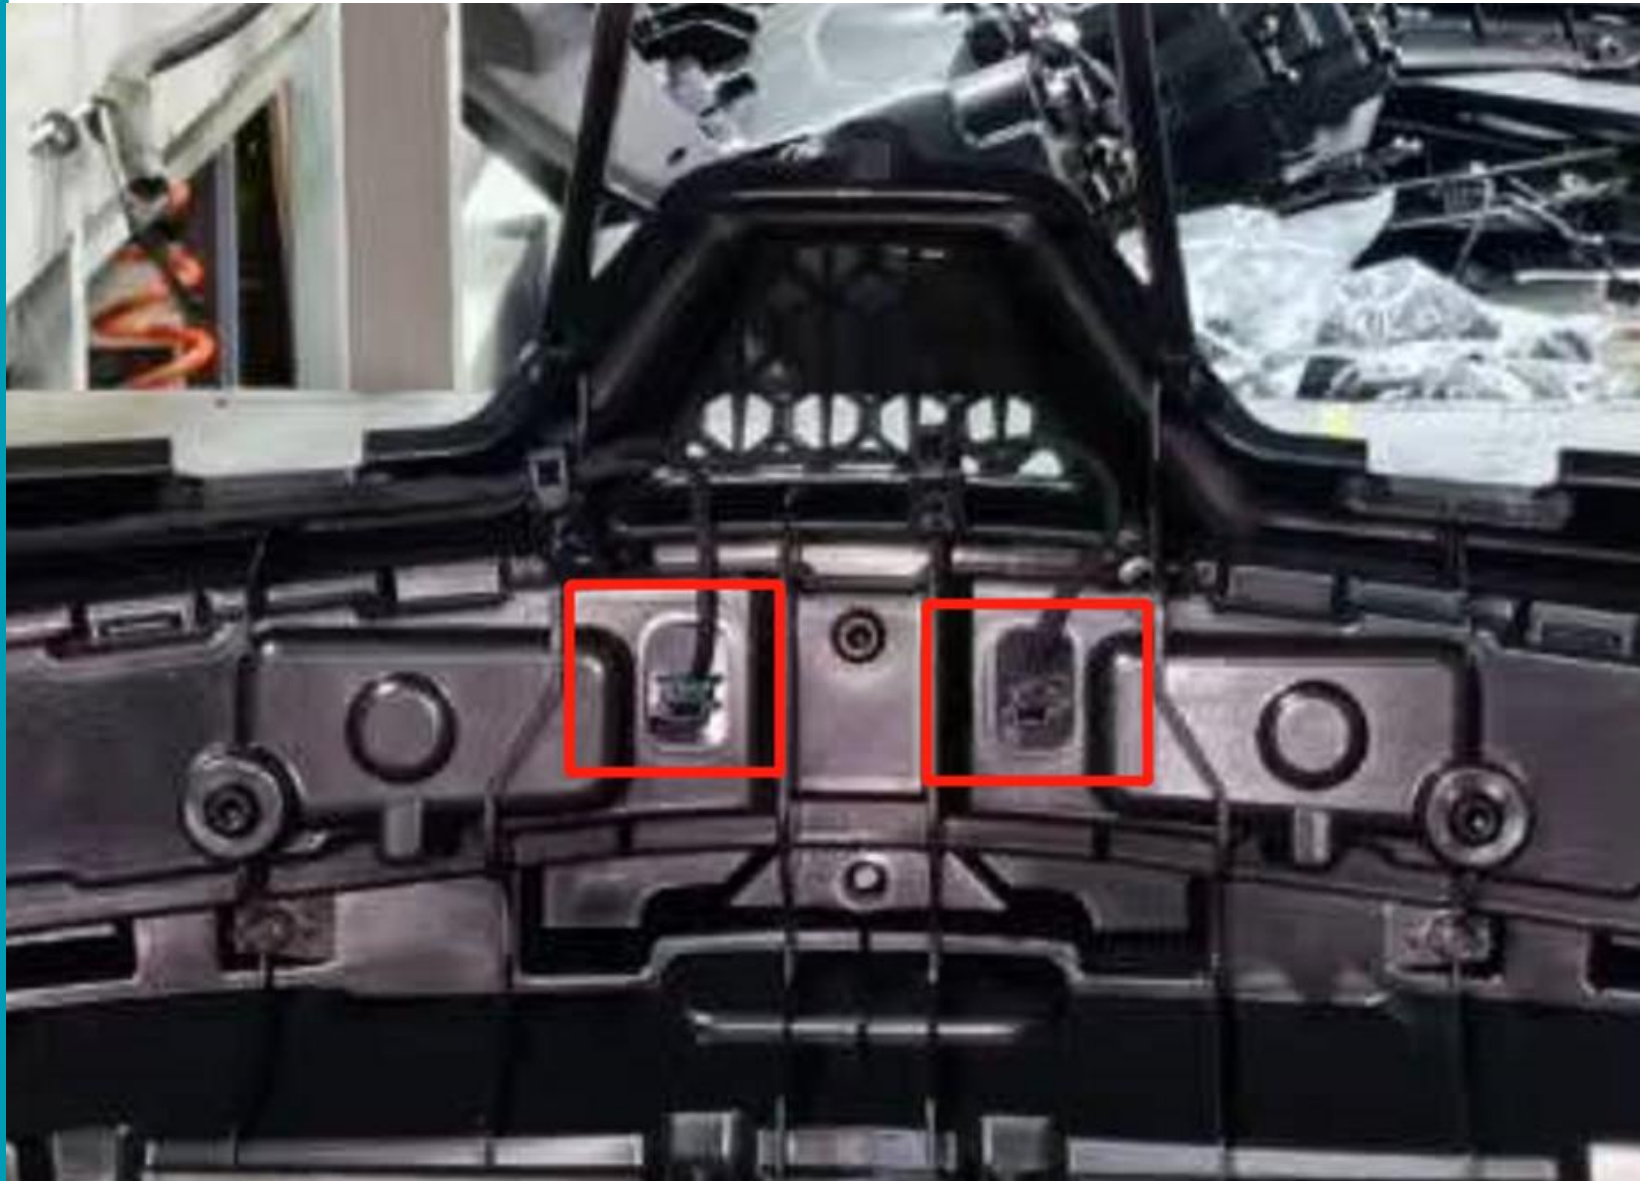

Remove the cable from plug

Middle position light install-step4

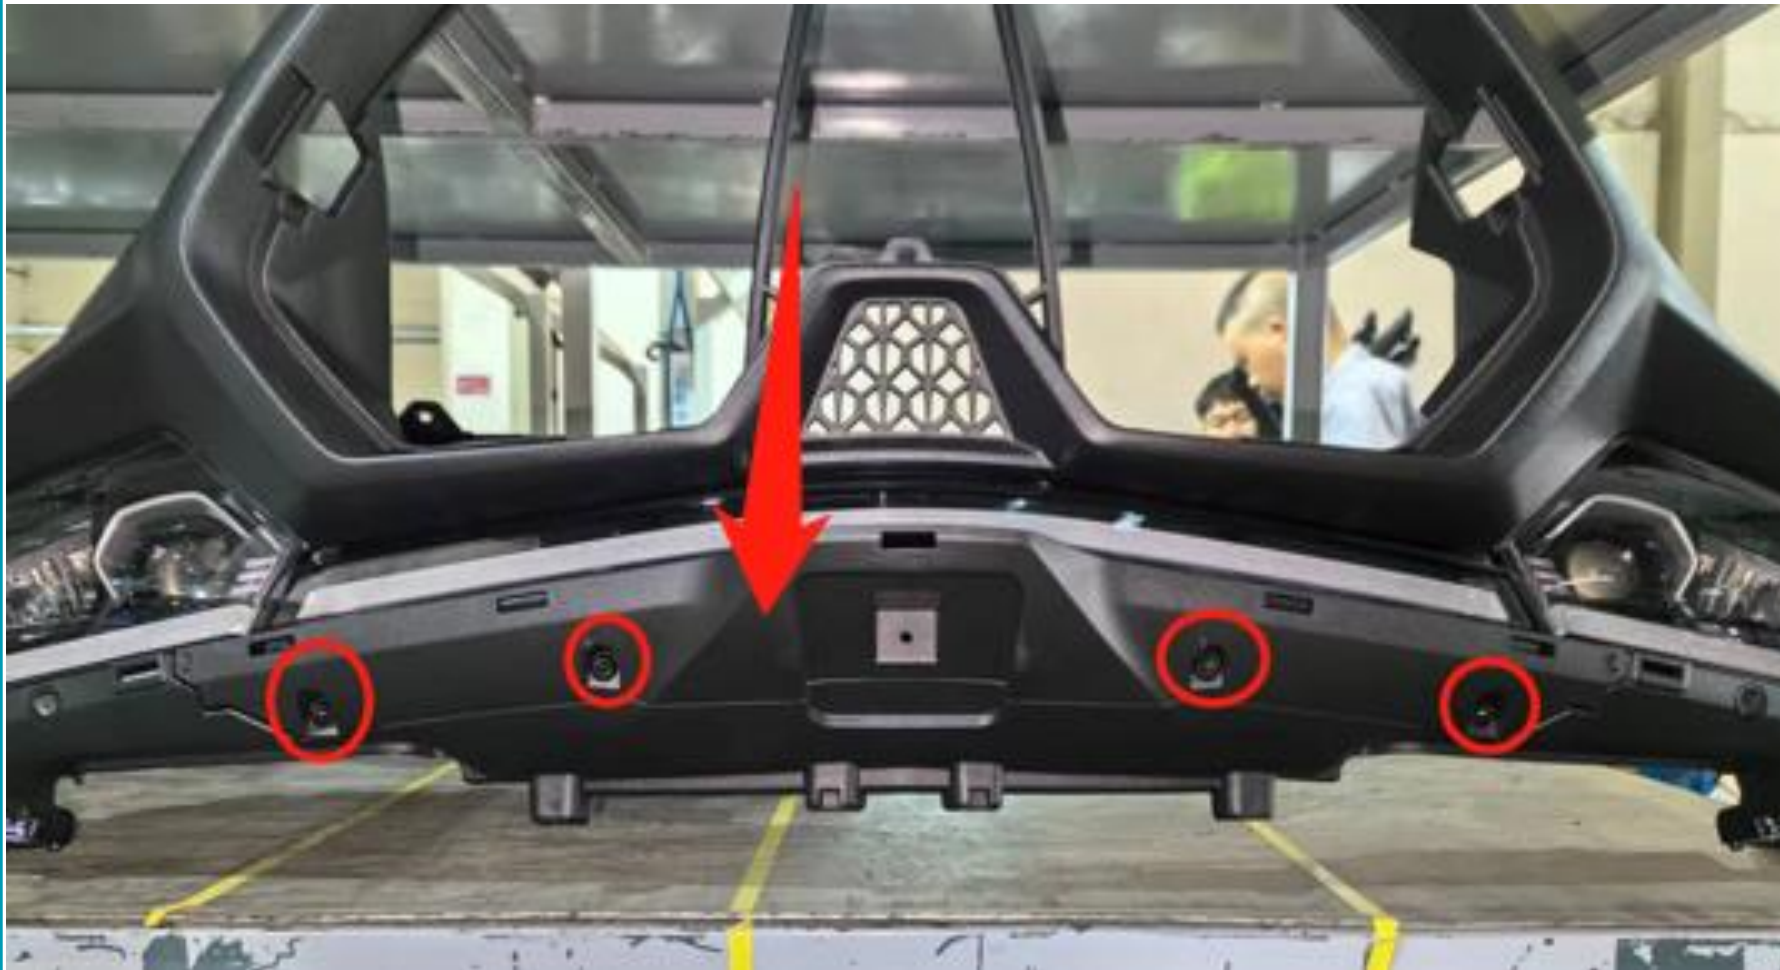

1. Remove 4 bolts from front side
2. Remove the plastic cover

Middle position light install-step5




Remove position light

Middle position light install-step6




Install new position light from front side

Middle position light install-step7

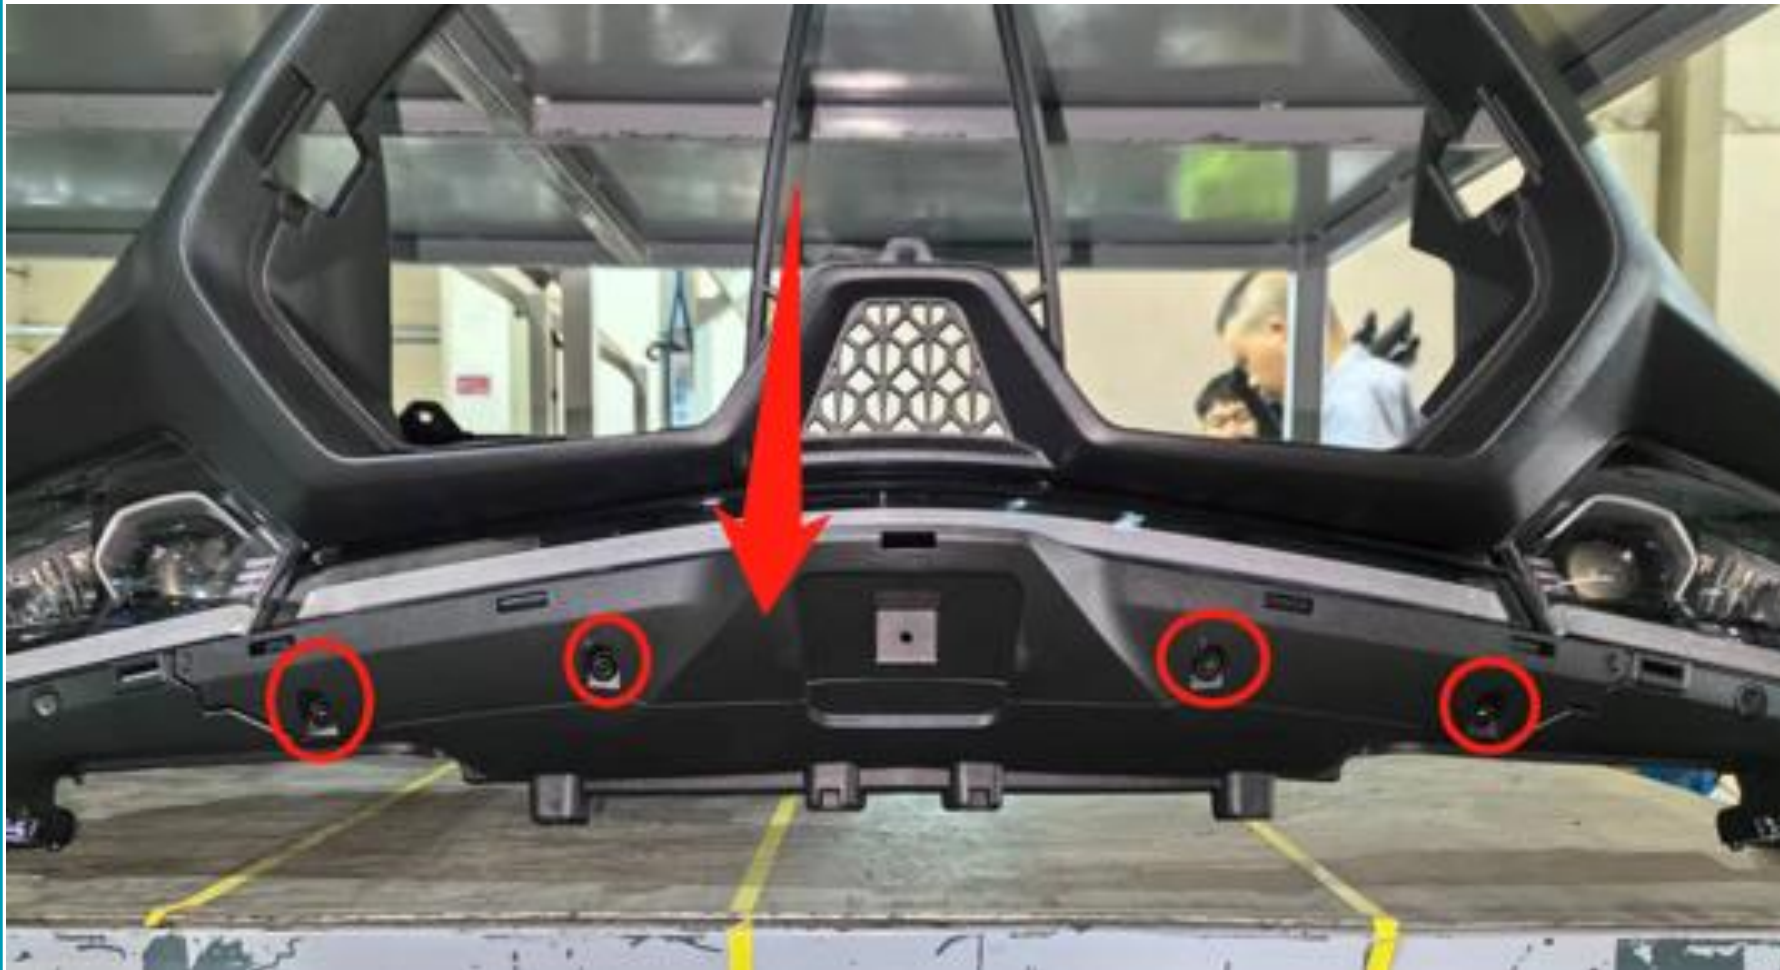

1. Install the plastic cover
2. Install 4 bolts from front side

Middle position light install-step3

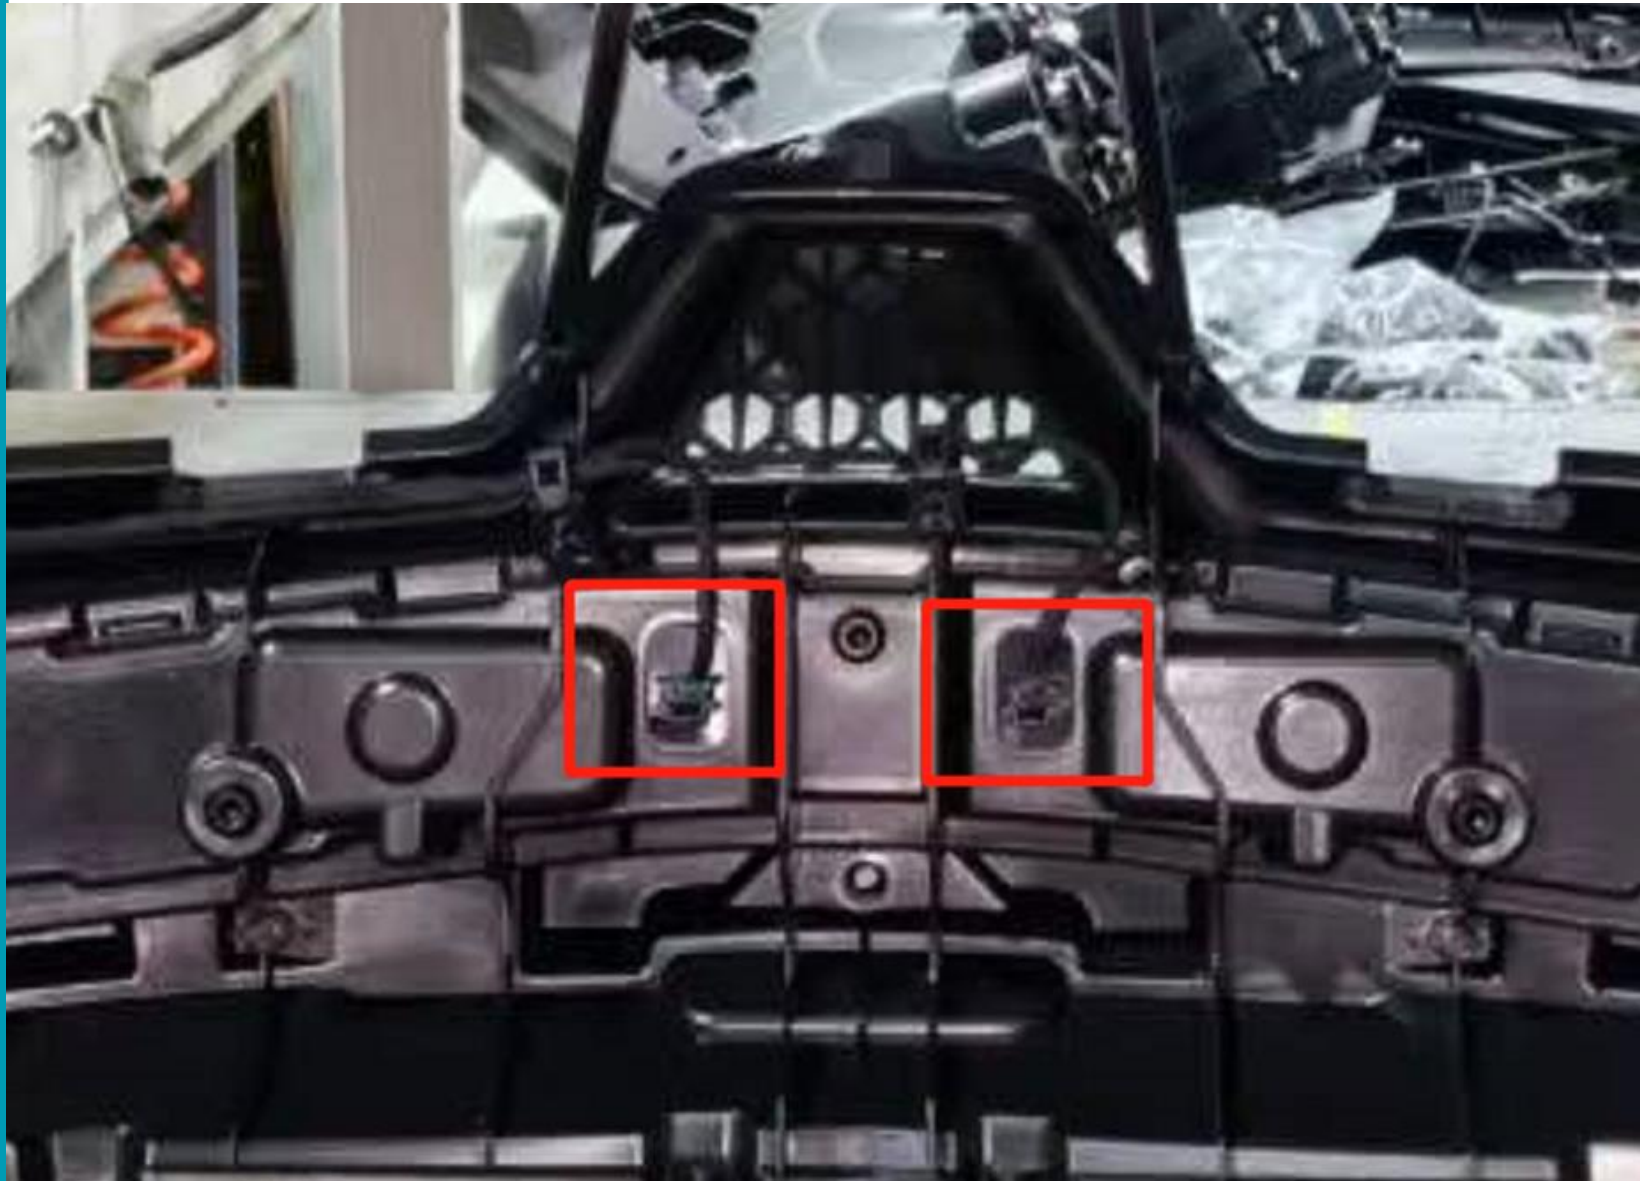


Insert the cable from plug

Middle position light install-step2



Install these bolts back

Middle position light install-step1

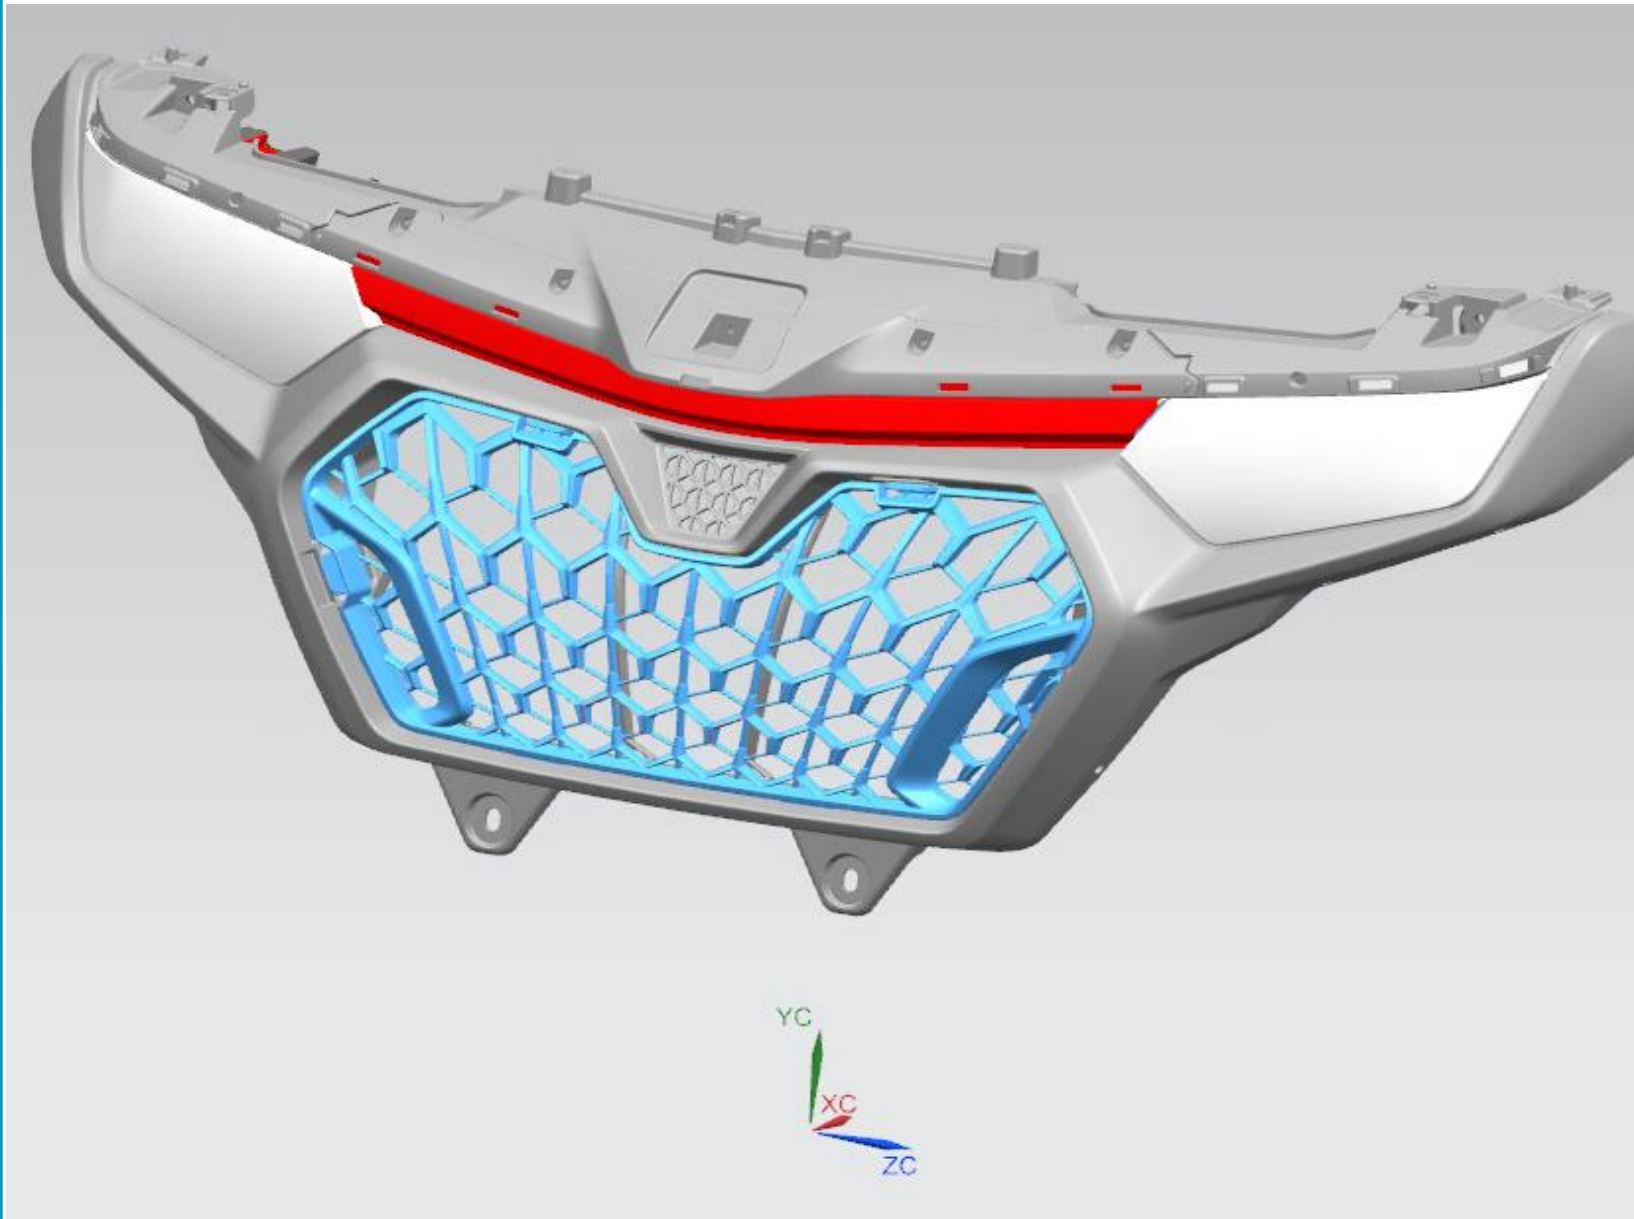

Install the total part back to vehicle


Middle position light install-Rear

Middle position light install-step1




Remove the total part from vehicle like the picture

Middle position light install-step2

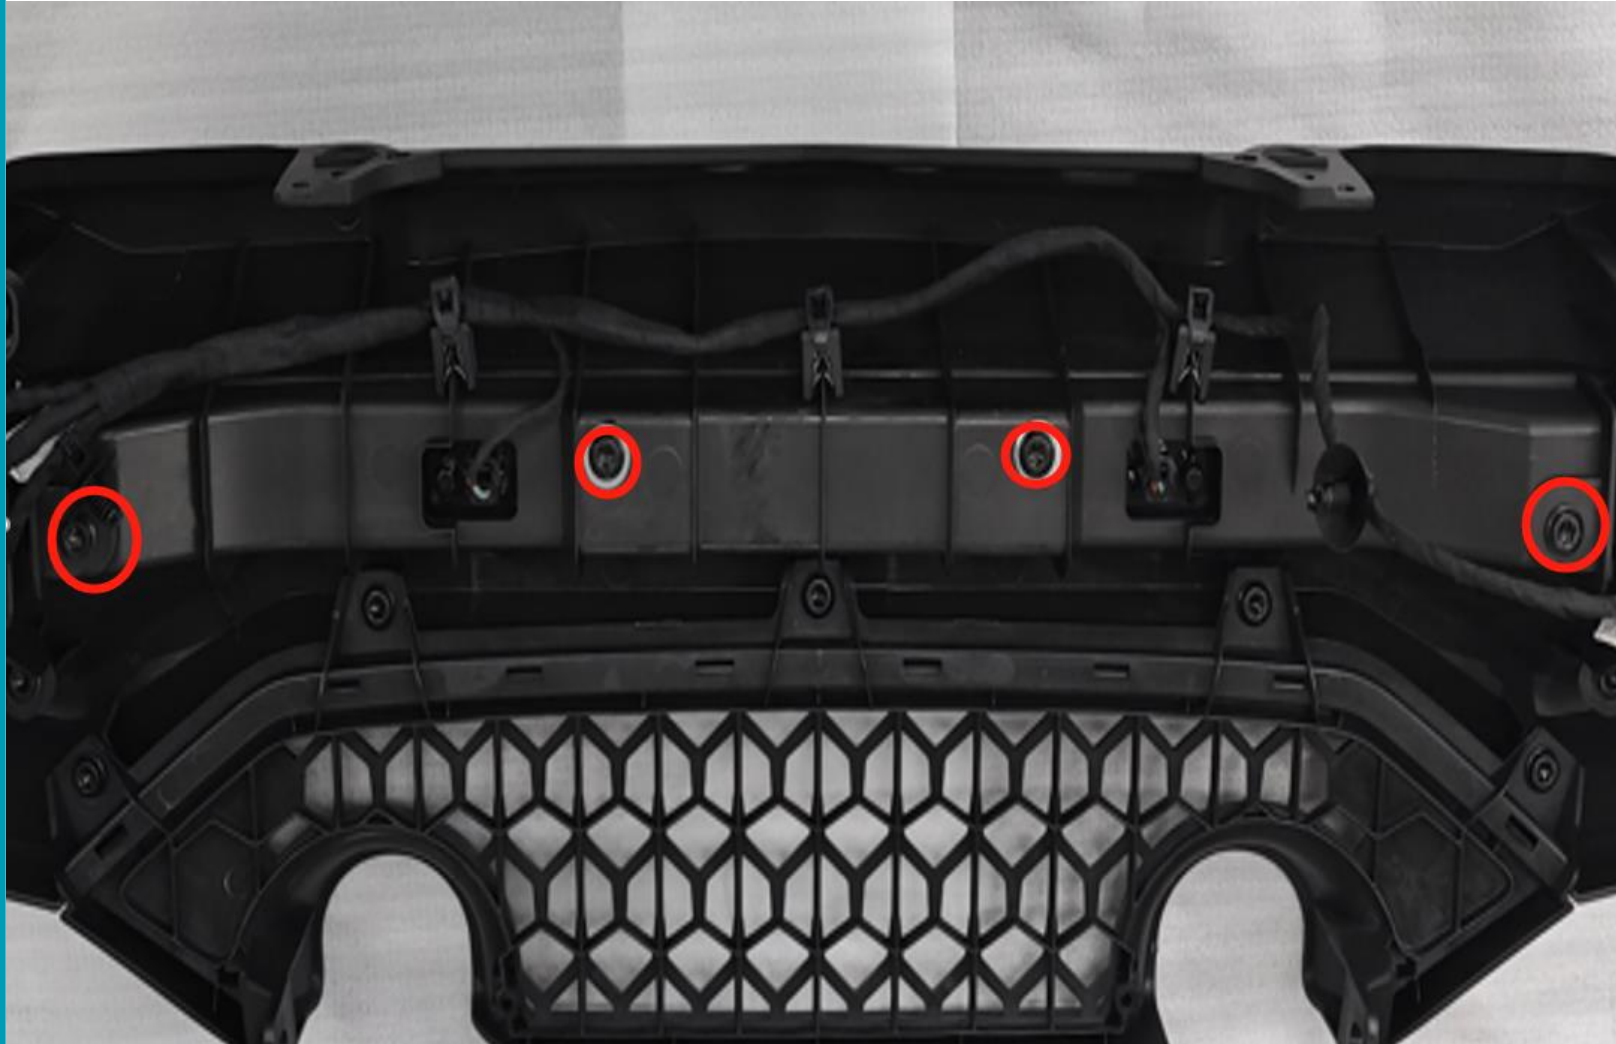

Remove these bolts from back side

Middle position light install-step3

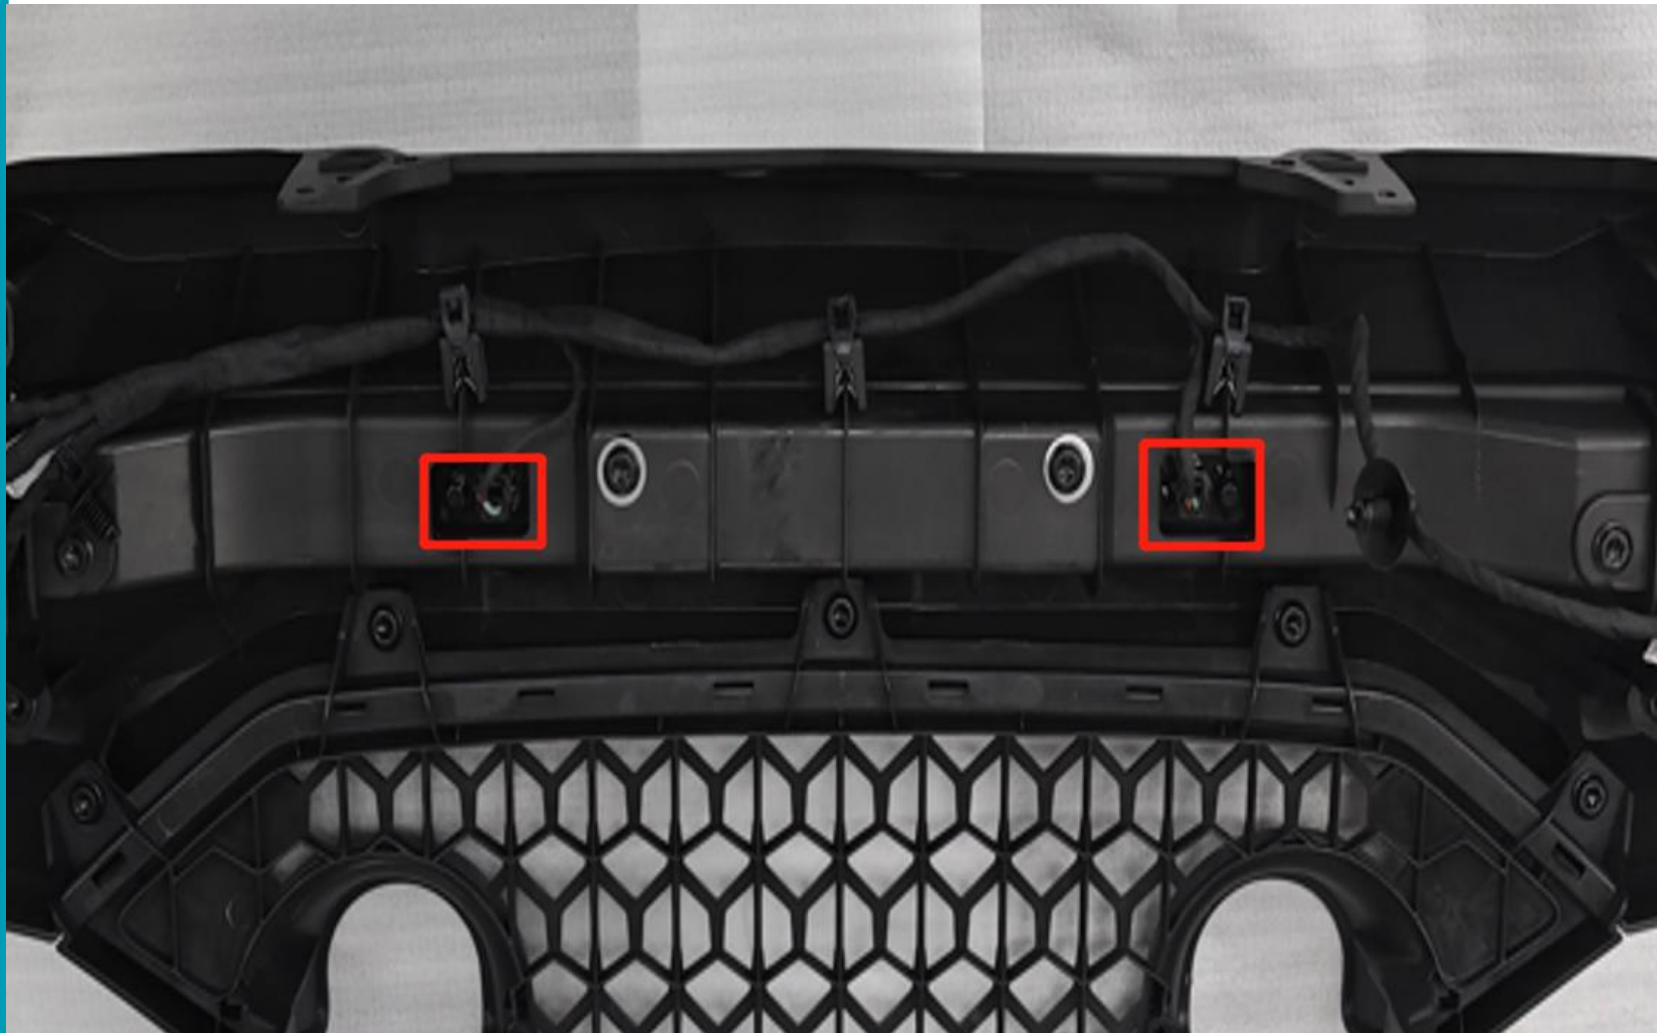


Remove the cable from plug

Middle position light install-step4




1. Remove middle position light
2. Install a new middle position light

Middle position light install-step5

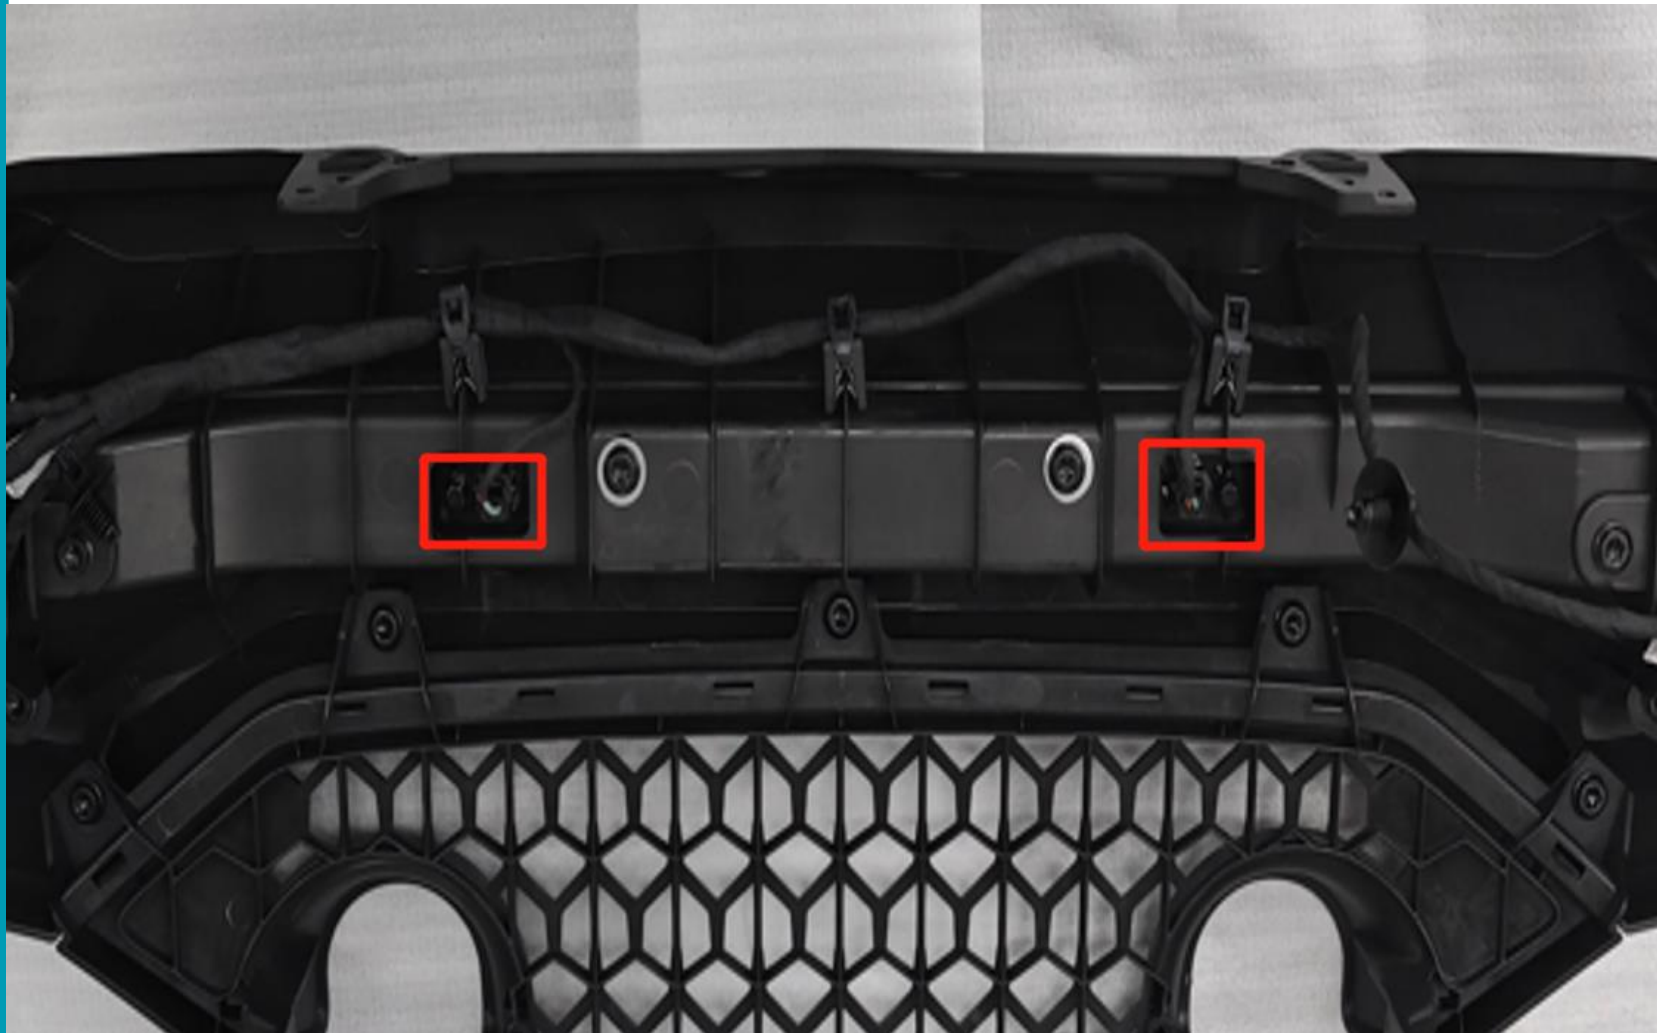

Insert the cable on plug

Middle position light install-step6

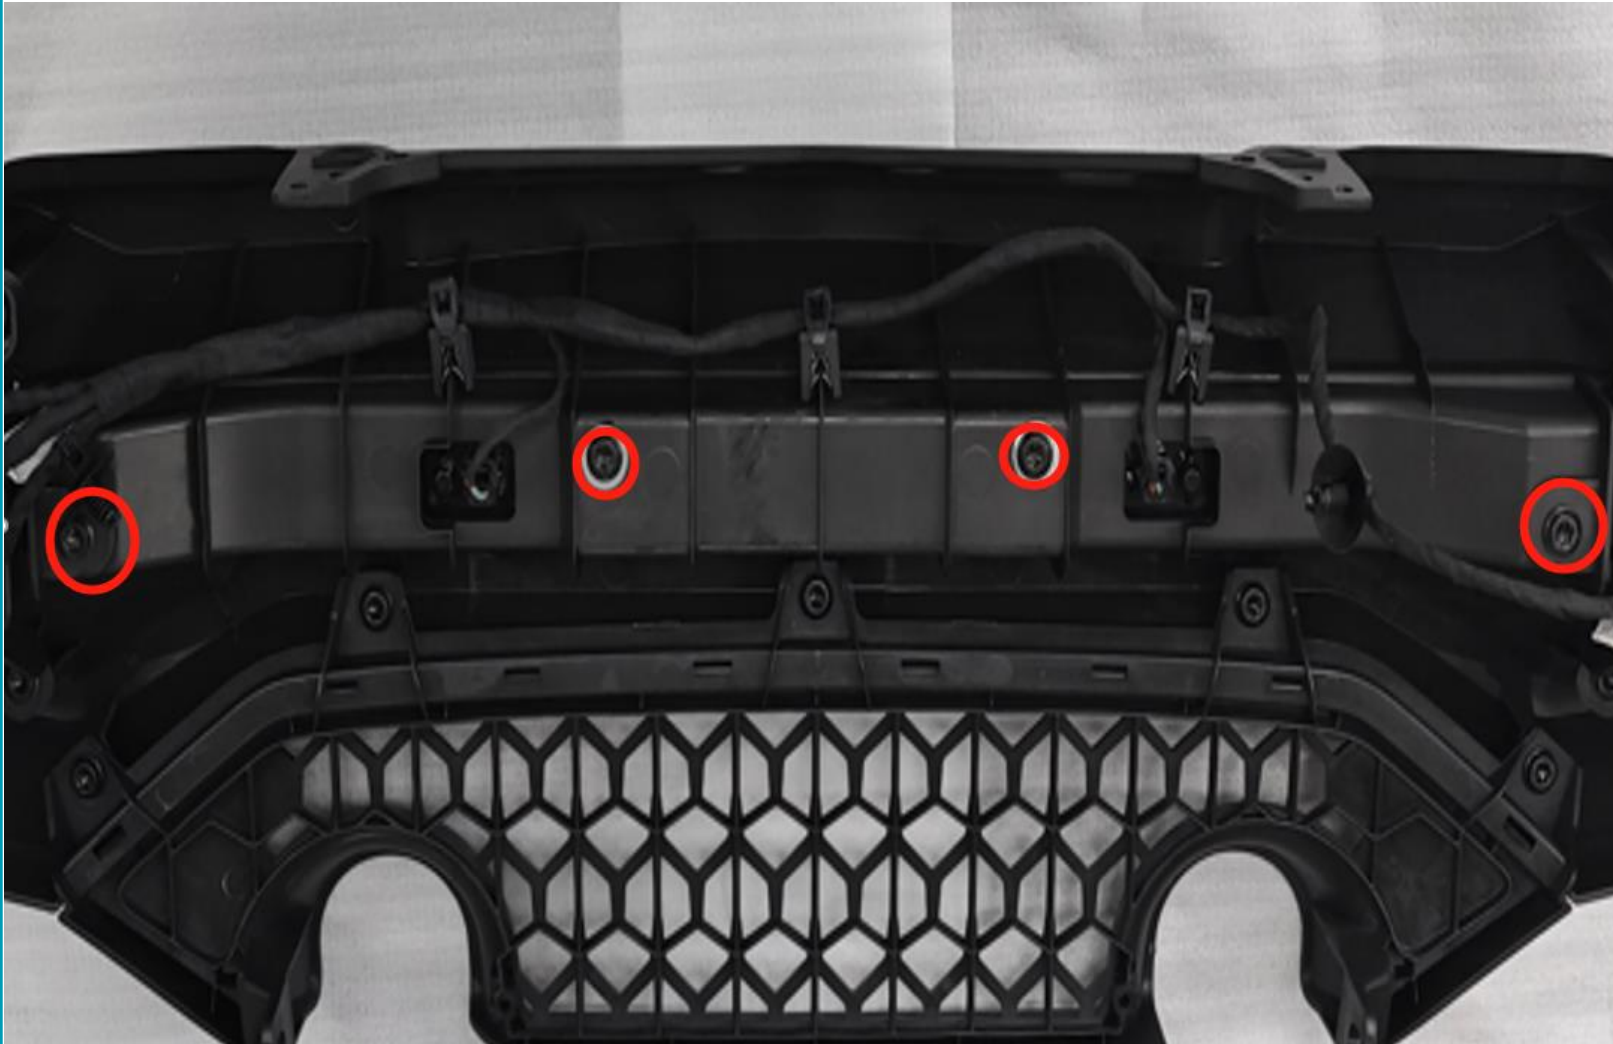

Fix these bolts from back side

Middle position light install-step7



Install the total part back to vehicle